


# **Enespro 12" Leather Glove Protectors**

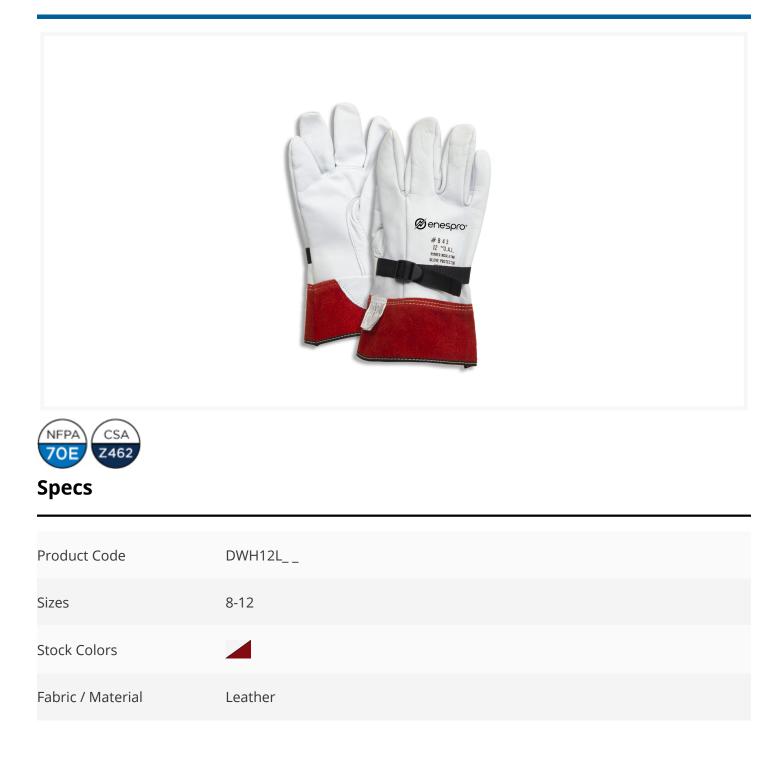

1

## Compliance

	• NFPA 70E
Standards	• CSA Z462
	• ASTM F696

#### Features

<ul> <li>Leather glove protectors should be used any time rubber voltage gloves are in use</li> <li>Class 2 rubber voltage gloves should be worn with 12" leather glove protectors (sold separately)</li> <li>Leather glove protectors are not required to be marked with a date</li> <li>Arc Flash</li> </ul>

### **Product Care**

• READ THE GARMENT LABEL AND FOLLOW INSTRUCTIONS ON GARMENT
LABEL.

• WASHING IS NOT RECOMMENDED.

## **Sizing Chart**

Product Care

ArcGuard <sup>®</sup> Rubber Voltage Gloves		
Size	Hand Circumference	
8	8" or less	
9	8 - 9"	
10	9 - 10"	
11	10" - 11"	
12	11" - 12"	

